
 
 
Doro PhoneEasy®618 **Quick Start Guide**

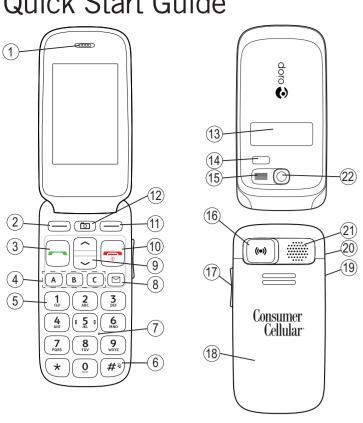

- Speed dials
- Silent/Input method
- Messages shortcut
- 10. End call/Power on/off

- 11. Right selection button 12. Camera shortcut





You may also view helpful how-to videos at

Charging

Warning!

Only use batteries, charger and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the phone's type approval and

Getting Started

When the battery is running low, is displayed and a warning signal is heard. To charge the battery, connect the AC power adapter to a wall socket and to the charging socket — on the

Important!

Turn off the phone and disconnect the charger before removing the battery cover.

Installing the SIM card and battery

The SIM card and battery are normally preinstalled for you. Follow these instructions should you ever need to access them yourself.

1. Remove the battery cover and the battery if it is already installed.

2. Optional: Insert the memory card into the slot

Press and hold the red button on the phone to turn it on/off. It takes several seconds so keep holding until you hear the sound.

Getting Started

Setting the language, time and date

Turning phone on & off

These are all set for you. The default menu language is English. See the full manual if you would like to change this setting.

The date and time are automatically set to the local time for the area you are in when the phone is powered on.

Start-up wizard

When starting the telephone for the first time, you can use the Start-up wizard to set some basic settings.

When Run start-up wizard? is displayed, press Yes to change Language, Time & date, Ring tone, Volume, Text size or Themes. Press **No** if you don't want to change.

See Settings/General/Start-up wizard in the complete manual.

Getting Started

Selection buttons

The selection buttons — have multiple functions. The current button function is shown above the selection button on the display.

Received, missed, and dialled calls are saved in a combined call log. 20 calls of each type can be stored in the log. For multiple calls related to the same number, only the most recent call is saved.

Retrieving and dialling

- **1.** Press _____.
- 2. Use \checkmark to scroll through the call log
 - = Received call = Dialled call
- = Missed call **3.** Press **r** to dial the highlighted number.

Consumer Cellular

- 1. Earpiece
- Left selection button Call button
- Voice mail
- Microphone
- Arrow buttons
- 21. Loudspeaker 22. Camera lens

The complete User Guide can be downloaded at www.ConsumerCellular.com/DoroPhoneEasy618 OR

www.doro.com

www.ConsumerCellular.com/SupportVideosAndManuals

Getting Started

Use \(\shi \) to scroll through the phonebook,

Press **Call** to dial the highlighted entry, or press

Creating ICE entry (In Case of Emergency)

such as medical information from the victim's

phone in case of emergency. In the event of a

as early as possible to increase the chances of

2. Select + ICE and press OK, then use \checkmark /

3. Press **Edit** to add or edit information in each

See *Phonebook/ICE* in the complete manual.

entry. Delete with **Clear**. Press **Save** when

trauma, it is critical to have this information

survival. All fields are optional, but the more

1. Press **Menu**, scroll to and press **OK**.

First responders can access additional information

or quick search by pressing the key corresponding

Making a call from the phonebook

Press **Name** to open the phonebook.

to the first letter of the entry.

information provided the better.

to scroll the list of entries.

13. External display

14. LEDs (Red=Battery low/ charging, Green=New message/missed call)

doro 🏖

- 15. Camera flash/Flashlight
- 16. Emergency button 17. Volume control
- 18. Battery cover 19. Headset socket
- 20. Charging socket
- 23. Lanyard
- **4.** Insert the battery by sliding it into the battery

Use only compatible memory cards for use with this device. Compatible card type: microSD, microSDHC. Incompatible cards may damage the card and the device and corrupt data stored on the card. Memory cards are sold separately.

Making a call

- **1.** Enter the phone number.
- 2. Press rto start the call.
- **3.** Press **r** to end the call.

There is no dial tone. Simply have the phone turned on and it is ready for use.

Receiving a call

To answer an incoming call when the flip is closed, open the flip.

If the flip is already open, or if **Open to answer** is set to **Off**:

- 1. Press **t** to answer, or press **Silent** to switch off the ring signal and then **Reject** to reject the call (busy signal). Alternately, press reject the call directly.
- **2.** Press **r** to end the call.

See Settings/Calls/Answer mode in the complete manual.

Volume control

Use the side buttons +/- to adjust the sound volume. The volume level is indicated on the display. When a call is in progress, the volume control adjusts the earpiece volume. When the phone is ringing, the volume control adjusts the ringer volume.

Entering text

Press a numerical key repeatedly until desired

character is shown. Wait a few seconds before

Press * for a list of special characters. Select

the desired character with \checkmark and press

Use the side keys +/- or \ldots/\rightarrow to move the

Press # to cycle upper case, lower case and

In some languages you can use Smart ABC

to suggest words. See Settings/Messages/

Predictive text in the complete manual.

You can dial or save phone numbers with

(eZiType™) input method which uses a dictionary

For international calls, always use + before the

country code for best operation. Press * twice for

pauses for use with automated systems, such as

are two types of pauses available on your phone,

voicemail or credit card billing numbers. There

press * repeatedly until desired character is

Entering text with predictive text

entering the next character.

OK to enter it.

numerals.

cursor within the text.

Entering phone numbers

the international prefix +.

Using Phonebook

The Phonebook can store 100 entries with 3 phone numbers in each entry.

Creating a phonebook entry

- **1.** Press **Menu**, scroll to and press **OK**.
- 2. Select -New contact- and press Add.
- **3.** Enter a Name for the contact, see *Entering* text. Delete with Clear. 4. Use / to select Mobile number, Home number or Office number, enter
- the phone number(s) including the area code. **5.** Select **Picture and** press **Edit** to associate
- a picture to the contact. This picture will be displayed when the
- corresponding contact is calling you and may also be visible in the phonebook. Select Take picture and press OK for using the camera to take a picture. Select My pictures and press OK to select an
- existing picture.
- **6.** Press **Save**. **7.** Press **return** to standby.

See Settings/General/Phonebook picture in the complete manual.

Deleting entries in Phonebook → Menu → Phonebook → Scroll to desired

entry→Options→Scroll to Delete→OK Press **Yes** to confirm or **No** to cancel.

Voice mail

holding 1. Speed dial

speed dialing.

Adding speed dial numbers

→Menu**→**Settings**→**Calls**→**Speed dial

Set the entry as one of the first 10 contacts listed in the phonebook.

You can connect wireless to other Bluetooth

→Menu**→**Settings**→**Bluetooth**→**OK

As long as the phone is switched on, it is always possible to place an SOS call by entering the main local emergency number for your present location followed by _____.

SOS/911 Calls

Most networks accept calls to emergency numbers without a valid SIM card. Contact your service provider for more information.

Note!

done.

Sometimes an emergency call cannot be placed due to network, environment or interference issues.

Emergency key

The Emergency key on the back of the phone will automatically dial one number for you. This can be used as a easy way to reach a family member or friend if you need help. The Emergency Call function must be activated before use. See the full manual at www.ConsumerCellular.com/DoroPhoneEasv618

OR www.doro.com for instructions.

To get sharp photos, wipe the lens clean with a dry cloth.

- 1. Press shortcut or press Menu, scroll to and press **OK**.
 - any selection the picture is saved).

3. Press Options or Back (if you do not make

Creating and sending text messages

- 1. Press shortcut (☑) or press Menu, scroll to ☑ and press **OK**.
- **2.** Select **Text message** and press **OK**.
- Alternatively, select **Enter number** and press **OK** to add recipients manually and press
- **5.** Select **Add** to add more recipients or select
- **6.** You can also modify the recipients by selecting one and press Options to Edit, Delete or

10.

8.

Note! If you choose to add multiple recipients, you will be charged for each recipient (maximum 10).

Messages

Reading an incoming message

When you receive a message while your phone is on, the screen will display . Press **Read** to read the message.

Creating and sending picture messages

A picture message can contain text and media objects such as pictures, sound recordings and video. Both you and the recipient must have subscriptions that support picture messages.

- 1. Press shortcut (☑) or press Menu, scroll to ☑ and press **OK**.
- 2. Select Picture message and press OK. **3.** Type your message, then press **Options**.
- **4.** Add items to your message from the options
- Add picture, Add sound, Add video and Add subject.
- **5.** Add recipients with **To** and **Send** when ready.

See *Messages* in the complete manual.

Custom Settings

Silent mode

Use **Silent** to silence your ring tones.

Press and hold # to activate/deactivate **Silent**.

11.

shown.

Press and hold + or - to temporary switch off the ring signal without opening the flip.

You can select different ring tones. Follow this

sequence to reach the customization. **→**Menu**→**Settings**→**Sound

Changing ring tones

Tone setup→Ring tone Use \to scroll between options. When you pause on a melody, you will hear its sound.

Once you have found the ring tone you wish to use, press **OK** to select. You can use this same process to customize the tones for your the Alarm, Message tone,

Opening tone, Closing tone, Keypad tone,

Power on and **Power off** in the same way.

Display background (wallpaper)

You can select different display backgrounds.

→Menu**→**Settings**→**Display**→**Wallpaper

The voice mailbox can be called by pressing and

Other Call Options

The numerical buttons A and B - C and the numerical keys 0 and 2 - 9 can be used for

Top 10

→Menu→Settings→Calls→Top 10

Bluetooth®

compatible devices such as headsets.

Useful Tools

Alarm

12.

Use the Alarm feature to set wake-up call or help you keep track of an important time.

track of important events.

Organizer

Note! These functions will work even when the phone is

Use the Organizer to store tasks to help you keep

Calculator

switched off.

The Calculator can perform basic math operations.

View your saved images and detailed information about files, e.g. date, size, copyright.

Flashlight

Image viewer

Note! The flashlight will drain the battery very quickly.

13.

Remember to turn off the flashlight after use.

15.


7.

9.

under the SIM card holder. Make sure that the memory card contacts are facing upwards and push the card in, until you hear a click. Take

care not to scratch or bend the contacts on the To remove or replace the card, push it in until you hear a click and then pull the card out.

3. Insert the SIM card by gently sliding it into the holder. Make sure that the SIM card's contacts are facing downwards and that the cut off corner is pointing inwards. Take care not to scratch or bend the contacts on the SIM card.

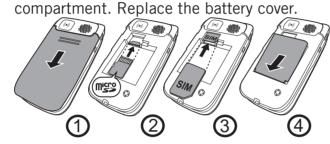

Camera

2. Press **to take photo.**

Messages

- **3.** Type your message, then press **To**. **4.** Select a recipient from phonebook and press
- Done.
- **Send** to send and then press **OK**. Delete all.

Disclaimer and Limitation Of Liability

Doro AB and its affiliates, licensees and retailers assume no responsibility for any damage or loss resulting from the use of this guide. Doro AB and its affiliates or licensees assume no responsibility for any loss or claims by third parties that may arise through the use of this software. Doro AB and its affiliates or licensees assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of all important data on other media to protect against data loss.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL DORO AB OR ANY OF ITS AFFILIATES, LICENSEES AND RETAILERS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL. INCI-DENTAL. CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED. THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS." EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY, OR CONTENTS OF THIS DOCUMENT. DORO AB RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

FCC/Industry Canada notice

Cet appareil est conforme aux dispositions de la partie 15 des règles de la FCC et des normes CNR d'Industrie Canada sur les appareils radio exempts de licence. Son utilisation est assujettie aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférence nuisible; et (2) cet appareil doit accepter toute interférence reçue, y compris l'interférence qui pourrait causer un fonctionnement non désiré.

Cet équipement a été testé et jugé conforme aux limites d'un appareil numérique de la Classe B, en vertu de la partie 15 des règles de la FCC et de la NMB-003 canadienne. Ces limites sont conçues pour fournir une protection raisonnable contre l'interférence nuisible dans une installation résidentielle. Cet équipement génère, utilise et peut émettre de l'énergie radiofréquence et, s'il n'est pas installé et utilisé conformément aux instructions, peut causer une interférence nuisible aux communications radio. Toutefois, il n'est pas garanti que l'interférence ne se produira pas dans une installation particulière. Si cet équipement cause une interférence nuisible à la réception radio ou de programmes de télévision, laquelle peut être déterminée en éteignant et en allumant l'équipement, l'usager est encouragé à essayer de corriger l'interférence par l'une ou plusieurs des mesures suivantes :

- Réorientez ou relocalisez l'antenne de réception.
- Augmentez la séparation entre l'équipement et le receveur.
- Connectez l'équipement à une prise sur un circuit différent de celui auquel de le receveur est connecté. Consultez le vendeur ou un technicien radio/de télévision
- pour obtenir de l'aide. La FCC ou Industrie Canada peut vous obliger à arrêter

d'utiliser votre appareil si une telle interférence ne peut pas être éliminée. Doro n'a pas approuvé les changements ou modifications

apportés à cet appareil par l'usager. Tous les changements ou modifications apportés peuvent entraîner la révocation de l'autorisation d'utilisation de l'appareil.

Safety Instructions

CAUTION The unit and the accessories can contain small parts. Keep all of the equipment out of the reach of small children. The mains adapter is the disconnect device between the product and mains power. The mains socket outlet must be close to the equipment and easily accessible.

Network services and costs

Your device is approved for use on the WCDMA 850/1900 MHz, GSM 850/1800/1900 MHz networks. To use the device, you need a subscription with a service provider. Using network services may result in traffic costs. Some product features require support from the network, and you may need to subscribe to them.

Operating environment

Follow the rules and laws that apply wherever you are, and always turn off the unit whenever its use is prohibited or can cause interference or hazards. Only use the unit in its normal user position.

This unit complies with guidelines for radiation when it is used either in a normal position against your ear, or when it is at least 0.6 in from your body. If the unit is carried close to your body in a case, belt holder or other holder, these holders should not contain any metal, and the product should be placed at the distance from your body specified above. Make sure that the distance instructions above are followed until the transfer is complete.

Parts of the unit are magnetic. The unit can attract metal objects. Do not keep credit cards or other magnetic media near the unit. There is a risk that information stored on them can be erased.

Medical units

The Health Industry Manufacturers Association recommends handheld wireless phone and a pacemaker to avoid potential

- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference.

Always turn off the unit when you are in an area where there is a risk of explosion, typically these are areas where you normally requested to turn off your car engine. Follow all signs and instructions.

In these areas, sparks can cause explosion or fire that can lead to personal injury or even death.

20.

If you use this unit while driving or riding a bicycle, keep in mind the following guidelines:

Safety Instructions

vehicles (for example, electronic fuel injection, ABS brakes,

incorrectly installed or are inadequately protected. Contact

the manufacturer or its representative for more information

vehicles equipped with air bags: Remember that air bags fill

equipment in the area above the airbag or the area where it

might expand. Serious injuries may be caused if the mobile

phone equipment is incorrectly installed and the airbag fills

It is prohibited to use the unit while in flight. Turn off the

Adapted from CTIA-The Wireless Association®

Use of this unit alone or with headphones (even if

used only in one ear) while driving a motor vehicle

some areas, and the user should not engage in such

conduct. Driving while operating a mobile phone is

distracting and could cause serious injury or death.

22.

or riding a bicycle is dangerous and is illegal in

telecommunications. It may also be illegal.

unit before you board a plane. Using wireless telecom units

inside a plane can pose risks to air safety and interfere with

automatic cruise control, air bag systems) that have been

Radio signals can affect electronic systems in motor

about your vehicle or any additional equipment.

with air with considerable force.

Do not keep or transport flammable liquids, gases or

explosives together with the unit or its accessories. For

Do not place objects, including fixed or portable radio

Vehicles

with air.

Driving safely

Warning!

 Give full attention to driving and to the road. Using a mobile device while driving may be distracting. If you find it disruptive or distracting while operating any type of vehicle, riding a bicycle, or performing any activity

before making or answering a call. Get to know your phone and its features such as phone book, call memory, and speakerphone.

that requires your full attention, pull off the road and park

These features help you to place your call without taking your attention off the road. See the applicable portion of this user's guide for more information.

Use a hands-free device.

Add an extra layer of convenience and safety to your unit with one of the many hands-free accessories available. Use of a headset or other hands-free device may be legally required. Several states have in recent years passed laws making it unlawful to operate a motor vehicle while talking on a wireless phone without use of a headset, speakerphone, or other hands-free device. County and municipal ordinances may also limit or ban wireless conversations for automobile drivers. Check the status of such laws in your area and in locations to which you travel by car. For SMS text messaging, it is a recommended safety practice that you never send or view received text messages while driving; in California, and likely other states in the future, SMS messaging by a driver is also a legal violation.

Position phone within easy reach.

Keep your eyes on the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.

FCC/Industry Canada notice

16.

17

This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the

limits for a Class B digital device, pursuant to part 15 of the FCC Rules/Canadian ICES-003. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. • Increase the separation between the equipment and the
- Connect the equipment to an outlet on a circuit different
- from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician
- for help. The FCC or Industry Canada can require you to stop using

your unit if such interference cannot be eliminated.

Doro has not approved any changes or modifications to this device by the user. Any changes or modifications could void he user's authority to operate the equipment.

Safety Instructions

Assess the traffic before dialing, or place calls when you

Try to plan calls when your car will be stationary. Never

dial, send SMS text messages, or enter other text while

Let the person you are speaking with know you are driving.

weather conditions. Driving in rain, sleet, snow, ice, fog,

• Do not take notes, look up phone numbers, or perform any

other activities that require your attention while driving.

address book takes attention away from your primary

• Do not engage in stressful or emotional conversations

aware you are driving and suspend conversations that

have the potential to divert your attention from the road.

This model phone meets the government's requirements for

This phone is designed and manufactured not to exceed the

emission limits for exposure to radio frequency (RF) energy

set by the Federal Communications Commission of the U.S.

The exposure standard for wireless mobile phones employs a

unit of measurement known as the Specific Absorption Rate,

or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for

SAR are conducted using standard operating positions accepted

by the FCC with the phone transmitting at its highest certified

power level in all tested frequency bands. Although the SAR

is determined at the highest certified power level, the actual

that may be distracting. Make people you are talking with

Jotting down a to-do list or flipping through your

If necessary, suspend the call in heavy traffic or hazardous

are not moving or before pulling into traffic.

and even heavy traffic can be hazardous.

RF exposure information (SAR)

responsibility, driving safely.

exposure to radio waves.

Government.

WS5D0R0618.

you are driving.

Safety Instructions

IC Radiation Exposure Statement

This EUT is compliance with SAR for general population/ uncontrolled exposure limits in IC RSS-102 and had been tested in accordance with the measurement methods and procedures specified in IEEE 1528 and IEC 62209. This equipment should be installed and operated with minimum distance 1.5 cm between the radiator and your body. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet appareil est conforme aux limites d'exposition DAS incontrôlée pour la population générale de la norme CNR-102 d'Industrie Canada et a été testé en conformité avec les méthodes de mesure et procédures spécifiées dans IEEE 1528 et IEC 62209.

Cet appareil doit être installé et utilisé avec une distance minimale de 1,5 cm entre l'émetteur et votre corps. Cet appareil et sa ou ses antennes ne doivent pas être co-localisés ou fonctionner en conjonction avec tout autre antenne ou transmetteur.

Hearing aid compatibility

Note!

24.

For hearing aid compatibility, you should turn off the Bluetooth connectivity.

Your mobile device model complies with FCC rules (C63.19-

2007) governing hearing aid compatibility. These rules require an M3 microphone or higher value. The M-value, shown on the device box and below, refers to lower radio frequency (RF) emissions. A higher M-value generally indicates that a device model has a lower RF emissions level, which may improve the likelihood that the device will operate with certain hearing aids. Some hearing aids are more immune than others are to interference. Please consult your hearing health professional

Care and Maintenance

- Do not disassemble or open crush, bend or deform,
- Only use the battery for the system for which it is specified.
- qualified with the system per IEEE-Std- 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a
- Promptly dispose of used batteries in accordance with local regulations.

Don't forget the receipt or a copy of the invoice.

phone batteries, go to: http://www.rbrc.org

- battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- other hazard.

For those host devices that utilize a USB port as a charging have completed the USB-IF compliance program.

Battery disposal and recycling information

When the battery in this unit has reached the end of its useful

life, please dispose of it according to your local environmental

The symbol to the left means that according to local laws and regulations your product should be disposed

of separately from household waste. When the battery

in this unit has reached the end of its useful life, take it to

natural resources and ensure that it is recycled in a manner

a collection point designated by local authorities. Some

collection points accept products for free. The separate

collection and recycling of your unit will help conserve

that protects human health and the environment.

laws and regulations. For information about recycling cell

Warranty and technical data

This product is guaranteed for a period of 12 months from the date of purchase. In the unlikely event of a malfunction occurring during this period, please contact Consumer Cellular. Proof of purchase is required for any service or support needed during the guarantee period.

This guarantee will not apply to a malfunction caused by an accident or a similar incident or damage, liquid penetration, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part. Furthermore, this guarantee will not apply to any malfunction caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the charger during a thunderstorm.

Batteries are consumables and are not included in any

This guarantee does not apply if batteries other than DORO original batteries are used.

21

This guarantee does not affect your legal (statutory) rights under your applicable national laws relating to the sale of consumer products.

Support

For assistance, please contact: Email: service@ConsumerCellular.com

www.ConsumerCellular.com/support Website: Telephone: (888) 345-5510

The advice above applies to the unit, battery, AC power adapter and other accessories. If the phone is not working as it should, please contact Consumer Cellular for service.

Need to test your cell phone?

test line by dialing (888) 460-8781 from your cellular phone.

With Consumer Cellular you are in control and can change your plan at any time. To check your usage and change your plan just go to My Account at www.ConsumerCellular.com

WCDMA 850/1900 MHz, Network: GSM 850/1800/1900 MHz 3.4 oz (including battery) 3.7V/800 mAh Li-ion batter y

© 2012 Doro AB. All rights reserved.

Bluetooth® is a registered trademark of Bluetooth SIG, inc. eZiType™ is a trademark of Zi Corporation. vCard is a trademark of the Internet Mail Consortium.

FCC ID: WS5DOR0618

PhoneEasy 618 (2021)

Version 1.1

SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the poser required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 0.712 W/kg and when worn on the body, as described in this user guide, is 0.761 W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.) While there may be differences between the SAR levels of various phones and at various positions, they

all meet the government requirement. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/ea/fccid after searching on FCC ID:

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm (5/8 inch) from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines.

If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm (5/8 inch) from your body when the phone is switched on. *In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national

reporting requirements and the network band.

to determine the M rating of your hearing aid and whether your hearing aid will work with this device.

TTY compatibility

Your device meets the M3/T4 level rating.

This unit does not support TTY signaling. If you intend to connect a TTY to the unit, this unit should not be purchased and, if already purchased, it should be returned for a refund.

Care and Maintenance

Your unit is a technically advanced product and should be treated with the greatest care. Negligence may void the warranty.

- Protect the unit from moisture. Rain/snowfall, moisture and all types of liquid can contain substances that corrode the electronic circuits. If the unit gets wet, you should remove the battery and allow the unit to dry completely before you replace it.
- Do not use or keep the unit in dusty, dirty environments. The unit's moving parts and electronic components can be damaged. • Do not keep the unit in warm places. High temperatures
- can reduce the lifespan for electronic equipment, damage batteries and distort or melt certain plastics. • Do not keep the unit in cold places. When the unit warms

up to normal temperature, condensation can form on the

- inside which can damage the electronic circuits. • Do not try to open the unit in any other way than that which is indicated here.
- Do not drop the unit. Do not knock or shake it either. If it is treated roughly the circuits and precision mechanics can be broken.

27.

Do not use strong chemicals to clean the unit.

29.

The use of equipment that transmits radio signals, for example, mobile phones, can interfere with insufficiently protected medical equipment. Consult a doctor or the manufacturer of the equipment to determine if it has adequate protection against external radio signals, or if you have any questions.

Safety Instructions

Comply with any notices at health care facilities instructing you to turn off the unit while you are there. Hospitals and other health care facilities sometimes use equipment that can be sensitive to external radio signals.

Pacemakers that a minimum separation of be maintained between a

interference with the pacemaker. Persons with pacemakers: • Should always keep the phone more than 6 inches (15 cm) from their pacemaker when the phone is turned on.

If you have any reason to suspect that interference is taking place, turn the phone off immediately.

Areas with explosion risk

Turn off the unit at filling stations, and any other place that has gas pumps and auto repair facilities.

 
chemical factories and places where blasting is in progress.

Follow the restrictions that apply to the use of radio

equipment near places where fuel is stored and sold,

Areas with risk for explosion are often – but not always – clearly marked. This also applies to below decks on ships; the transport or storage of chemicals; vehicles that use liquid fuel (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powder. Protect your hearing

WARNING:



Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

Emergency calls Important!

19.

Mobile phones such as this unit use radio signals, the mobile phone network, the terrestrial network and user-programmed functions. This means that connection cannot be guaranteed in all circumstances. Therefore, you should never rely solely on a mobile phone for very important calls such as medical emergencies.

- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery with a charging system that has been
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- risk of fire, explosion, leakage or other hazard.
- Battery usage by children should be supervised. • Avoid dropping the phone or battery. If the phone or
- Improper battery use may result in a fire, explosion or

source, the host device's user manual shall include a statement that the device shall only be connected to CTIA certified adapters, products that bear the USB-IF logo or products that

28.

At anytime you can place a mobile phone test call to our FREE If the call is completed correctly you will hear a recorded message telling you that your mobile phone is working.

Check your minutes or change your plan.

Or call (888) 373-1777 any time. The call is free.

Specifications

Dimensions: 4 in x 2.1 in x 0.9 in Weight: Battery:

English QSG

www.doro.com

25.